


GNSS Positioning Module

TAU1103

Datasheet V1.5

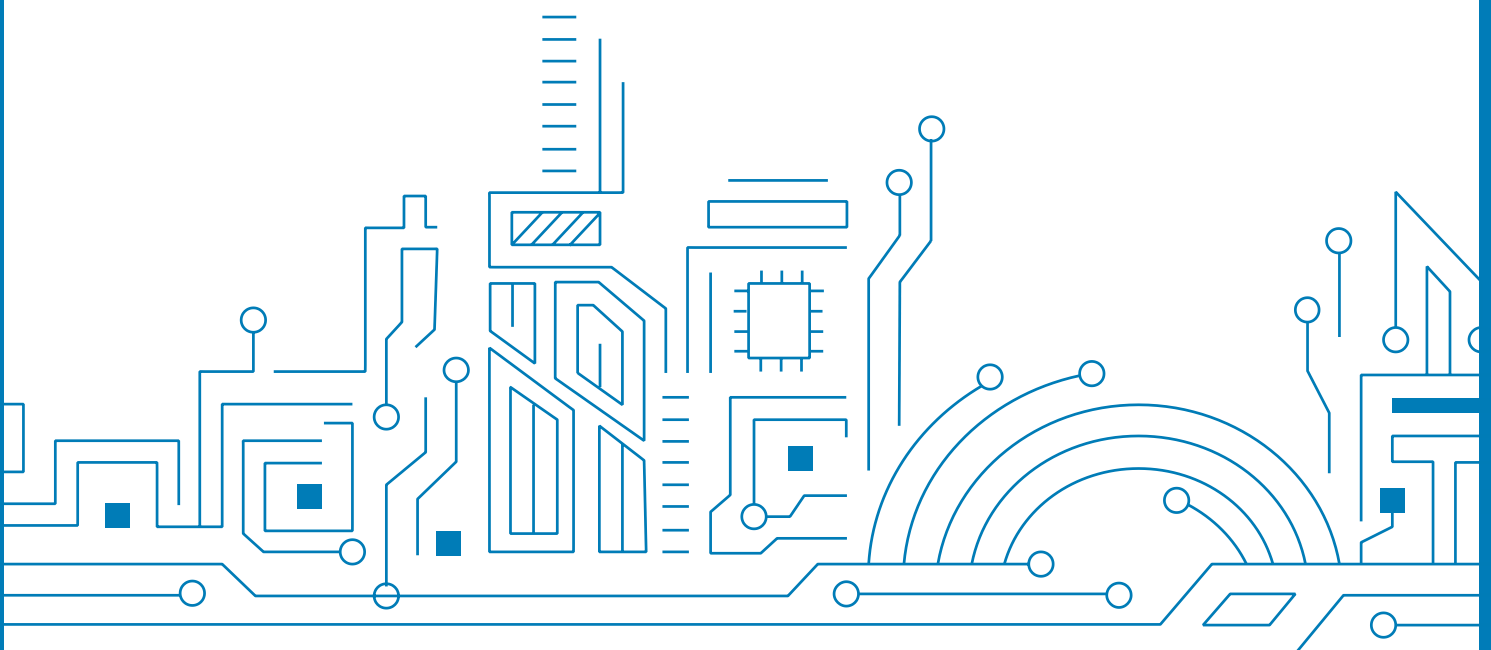

Notice, Statement and Copyright

ALLYSTAR Technology offers this document as a service to its customers, to support application and engineering efforts that use the products designed by ALLYSTAR Technology. Products and specifications discussed herein are for reference purposes only. Performance characteristics listed in this document do not constitute a warranty or guarantee of product performance.

ALLYSTAR Technology assumes no liability or responsibility for any claims or damages arising out of the use of this document, or from the use of integrated circuits based on this document, including, but not limited to claims or damages based on infringement of patents, copyrights or other intellectual property rights.

This document contains proprietary technical information which is the property of ALLYSTAR Technology, copying of this document and giving it to others and using or communication of the contents thereof, are forbidden without express authority. Offenders are liable to the payment of damages. ALLYSTAR Technology reserves the right to make changes in its products, specifications and other information at any time without notice.

For more recent documents, please visit www.allystar.com.

Copyright © Allystar Technology (Shenzhen) Co., Ltd. 2022. All rights reserved.

About the Document

■ Basic info

Document applies to	TAU1103
Document type	Datasheet
Revision and date	V1.5/2022-10
Product status	Preliminary

■ Product status description

In development	Objective specification. Revision may be released in later status.
Engineering sample	Product specifications tested on early. Revision may be released in later status.
Preliminary	Product specifications come from small production. Revision may be released in later status.
Mass production	Final product specification to mass market.

TABLE OF CONTENT

1	SYSTEM OVERVIEW	7
1.1	General Description	7
1.2	Features	7
1.3	Module Photo.....	7
1.4	Block Diagram.....	8
1.5	Specifications	9
2	PIN DESCRIPTION	10
2.1	Pin Assignment.....	10
2.2	Detailed Pin Descriptions	11
3	ELECTRICAL CHARACTERISTICS	12
3.1	Absolute Maximum Rating	12
3.2	IO Characteristics	12
3.2.1	PRRSTX and PRTRG	12
3.2.2	Others	12
3.3	DC Characteristics	13
3.3.1	Operating Conditions	13
3.3.2	Power Consumption.....	13
4	HARDWARE DESCRIPTION	14
4.1	Connecting Power.....	14
4.2	Antenna Design.....	14
4.3	Reset and Mode Control	14
5	DEFAULT MESSAGE.....	16
6	MECHANICAL SPECIFICATION.....	17
7	REFERENCE DESIGN	18
7.1	Minimal Design	18
7.2	PCB Footprint Reference	18
7.3	Layout Notes	19
8	SOFTWARE INTERFACE	20
8.1	NMEA Message Format.....	20
8.1.1	GGA - Global Positioning System Fix Data.....	20
8.1.2	GLL - Geographic Position - Latitude/Longitude	21
8.1.3	GSA - GNSS DOP and Active Satellites.....	21
8.1.4	GSV - GNSS Satellites in View.....	22
8.1.5	RMC - Recommended Minimum Specific GNSS Data.....	23

8.1.6	VTG - Course over Ground and Ground Speed.....	24
8.1.7	ZDA - Time & Date.....	24
8.1.8	GST - GNSS Pseudorange Error Statistics.....	24
8.1.9	TXT-ANT & USR message.....	25
8.2	Exclusive Binary Message.....	26
8.3	Mode Configuration.....	26
8.3.1	CFG-SIMPLERST.....	26
9	PRODUCT PACKAGING AND HANDLING.....	28
9.1	Packaging.....	28
9.1.1	Packaging Notes.....	28
9.1.2	Tape and Reel.....	28
9.1.3	Shipment Packaging.....	29
9.2	Storage.....	30
9.3	Handling.....	30
9.3.1	ESD Handling Precautions.....	30
9.3.2	ESD Protection Measures.....	30
9.3.3	Moisture Sensitivity Level.....	30
10	LABELING AND ORDERING INFORMATION.....	31
10.1	Labeling.....	31
10.2	Ordering info.....	31
11	RELATED DOCUMENTS.....	32
12	REVISION HISTORY.....	33

List of tables

Table 1	TAU1103.....	7
Table 2	Specifications.....	9
Table 3	Detailed pin descriptions.....	11
Table 4	Absolute rating.....	12
Table 5	PRRSTX and PRTRG.....	12
Table 6	Others.....	12
Table 7	Operating conditions.....	13
Table 8	Power consumption.....	13
Table 9	Default messages.....	16
Table 10	Dimensions.....	17
Table 11	NMEA output message.....	20
Table 12	GGA Data Format.....	20
Table 13	Position Fix Indicators.....	21
Table 14	GLL Data Format.....	21
Table 15	GSA Data Format.....	21

Table 16 Mode 1	22
Table 17 Mode 2.....	22
Table 18 GSV Data Format	22
Table 19 RMC Data Format	23
Table 20 VTG Data Format	24
Table 21 ZDA Data Format	24
Table 22 GST Data Format	25
Table 23 TXT Data Format	25
Table 24 Antenna status NMEA output.....	25
Table 25 Commands exclusive to TAU1103	26
Table 26 Packing hierarchy	28
Table 27 Ordering codes.....	31

List of figures

Figure 1 TAU1103 module photo	7
Figure 2 Block diagram.....	8
Figure 3 Pin assignment (top view)	10
Figure 4 Timing of mode entry with host controller	15
Figure 5 Dimensions	17
Figure 6 Minimal application diagram.....	18
Figure 7 PCB Footprint Reference.....	18
Figure 8 Tape dimensions	28
Figure 9 Reel dimensions	29
Figure 10 Packaging	29

1 SYSTEM OVERVIEW

1.1 General Description

TAU1103 is a cost-effective GNSS positioning module which is based on CYNOSURE II GNSS SoC chip. It supports GPS/QZSS, Galileo, and GLONASS. With a compact size and high integrated design, TAU1103 is easy to apply to navigation applications, especially friendly to a solution requiring a strict cost.

1.2 Features

- Low power consumption design
- Active antenna short circuit protection and open circuit detection
- Supports single system independent positioning and multi-system joint positioning
- Supports A-GNSS feature
- Compatible with mainstream GPS modules

Table 1 TAU1103

Product	GNSS						Feature					Interface			Accuracy		Grade		
	Band (S/D/T)	GPS	BDS	GLONASS	Galileo	NavIC	Built-in LNA	Programmable (flash)	Data logging	D-GNSS	Oscillator	UART	I2C	USB	SPI	Meter	Sub-meter	Centimeter	Industrial
TAU1103-1010A00E	S	●		●	●		●	●	●	●	T	○			●			●	

T = TCXO

○ = Supported upon request with special firmware

1.3 Module Photo



Figure 1 TAU1103 module photo

1.4 Block Diagram

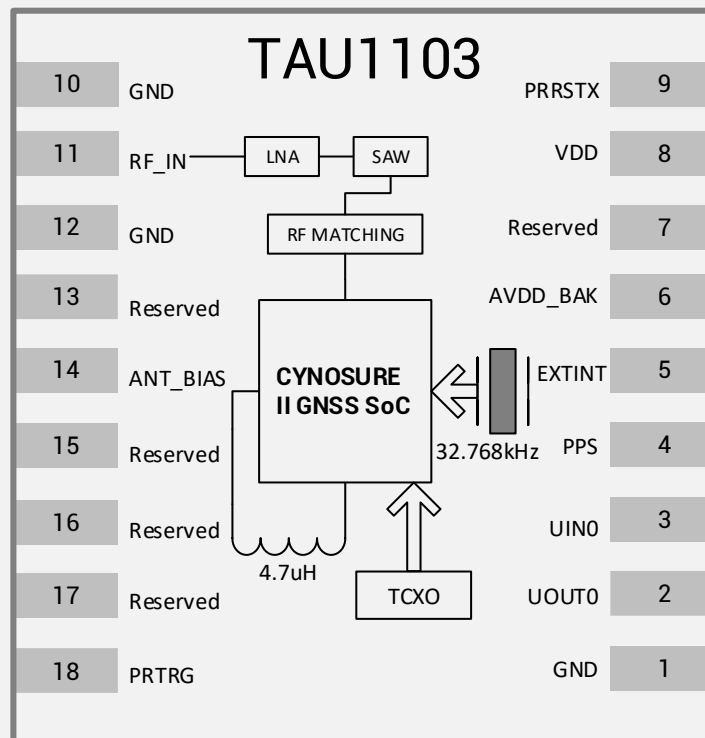


Figure 2 Block diagram

1.5 Specifications

Table 2 Specifications

Parameter	Specification	
GNSS channels	72 in total	
GNSS reception	GPS/QZSS: L1C/A	
	Galileo: E1	
	GLONASS: G1	
	SBAS: L1	
Updating rate	5 Hz maximum	
Position accuracy ^[1]	GNSS	2.5m CEP
Velocity & Time accuracy	GNSS	0.1 m/s CEP
	1PPS	25 ns
Time to First Fix (TTFF)	Hot start	1s
	Cold start	28s
Sensitivity ^[2]	Cold start	-148 dBm
	Hot start	-158 dBm
	Reacquisition	-159 dBm
	Tracking	-162 dBm
Operating condition	Main voltage	3.0-3.6 V
	Digital I/O voltage	3.0-3.6 V
	Backup voltage	1.6-3.6 V
Power consumption	Operating mode	GNSS ^[3] 33 mA @ 3.3V
	Standby mode	14 uA
Serial interface	UART	1
	I ² C ^[4]	1
Protocol	NMEA 0183 Protocol Ver.3.01/4.00 (Default)/4.10 Cynosure GNSS Receiver Protocol	
Operating limit	Velocity	515 m/s
	Altitude	18,000m
Antenna supervision	Antenna short circuit protection and open circuit detection	
Operating temperature	-40°C to +85°C	
Storage temperature	-40°C to +85°C	
Package	10.1x 9.7x2.5 mm 18-pin stamp hole	
Certification	RoHS, REACH, CE-RED, FCC	

* [1] Open sky condition.

* [2] Demonstrated with a good external LNA

* [3] GNSS = GPS/QZSS+Galileo+GLONASS+SBAS

* [4] Supported upon request with special firmware

2 PIN DESCRIPTION

2.1 Pin Assignment

10	GND	PRRSTX	9
11	RF_IN	VDD	8
12	GND	Reserved	7
13	Reserved	AVDD_BAK	6
14	ANT_BIAS	EXTINT	5
15	Reserved	PPS	4
16	Reserved	UIN0	3
17	Reserved	UOUT0	2
18	PRTRG	GND	1*

**TAU1103
Top View**

* Pin 1 aligns to the circular hole on module cover.

Figure 3 Pin assignment (top view)

2.2 Detailed Pin Descriptions

Table 3 Detailed pin descriptions

Function	Symbol	No.	I/O	Description
Power	VDD	8	Power	Main power supply voltage input.
	GND	1, 10, 12	VSS	Ground
	AVDD_BAK	6	Power	Backup power supply voltage input. Backup power is needed in order to enable warm and hot start features. Backup power is a must for system working. If no backup power is available, connect AVDD_BAK to the main power supply.
Antenna	RF_IN	11	I	RF signal input. Use a controlled impedance of 50Ω for the routing from RF_IN pin to the antenna or the antenna connector.
	ANT_BIAS	14	O	Antenna bias voltage output. The ANT_BIAS pin can be used to power an external active antenna, and the current should be no more than 25 mA.
UART	UOUT0	2	O	UART0 serial data output.
	UIN0	3	I	UART0 serial data input.
Other	PRTRG	18	I	Mode selection, or the trigger input in deep sleep mode to wake up the system.
	PRRSTX	9	I	External reset, low active
	PPS	4	O	Setting for time pulse output (PPS). Leave it floating if not used.
	EXTINT	5	I	A trigger pin to external interrupt. Leave it floating if not used.
	Reserved	7, 13, 15, 16, 17	--	Reserved pins. Leave it floating if not used.

3 ELECTRICAL CHARACTERISTICS

3.1 Absolute Maximum Rating

Table 4 Absolute rating

Symbol	Parameter	Min.	Max.	Unit
VDD	Power input for the main power domain	-0.5	3.6	V
AVDD_BAK	Power input for the backup power domain	-0.5	3.6	V
V _I max	Digital I/O pin input voltage	-0.5	3.6	V
T _{storage}	Storage temperature	-40	85	°C
T _{solder}	Solder reflow temperature	--	260	°C

3.2 IO Characteristics

3.2.1 PRRSTX and PRTRG

Table 5 PRRSTX and PRTRG

Symbol	Parameter	Condition	Min.	Typ.	Max.	Unit
I _{Iz}	Input leakage current	--	--	--	+/-1	uA
V _{IH}	Input high voltage	--	AVDD_BAK*0.67	--	AVDD_BAK	V
V _{IL}	Input low voltage	--	0	--	AVDD_BAK*0.27	V
V _{OH}	Output high voltage	I _{OH} = 5.3 mA, AVDD_BAK = 3.3V	2.64	--	--	V
		I _{OH} = 1.2 mA, AVDD_BAK = 1.8V	1.53	--	--	V
V _{OL}	Output low voltage	I _{OL} = 3.9 mA, AVDD_BAK = 3.3V	--	--	0.4	V
		I _{OL} = 1.9 mA, AVDD_BAK = 1.8V	--	--	0.45	V
C _i	Input capacitance	--	--	--	11	pF
R _{PU}	Pull-up resistance	--	35	--	84	kΩ

3.2.2 Others

Table 6 Others

Symbol	Parameter	Condition	Min.	Typ.	Max.	Unit
I _{Iz}	Input leakage current	--	--	--	+/-1	uA
V _{IH}	Input high voltage	--	VDD*0.67	--	VDD	V
V _{IL}	Input low voltage	--	0	--	VDD*0.27	V
V _{OH}	Output high voltage	I _{OH} = 5.3 mA, VDD = 3.3V	2.64	--	--	V
V _{OL}	Output low voltage	I _{OL} = 3.9 mA, VDD = 3.3V	--	--	0.4	V
C _i	Input capacitance	--	--	--	11	pF

R _{PU}	Pull-up resistance	--	35	--	84	kΩ
-----------------	--------------------	----	----	----	----	----

3.3 DC Characteristics

3.3.1 Operating Conditions

Table 7 Operating conditions

Symbol	Parameter	Min.	Typ.	Max.	Unit
VDD	Power supply voltage	3.0	3.3	3.6	V
AVDD_BAK	Backup battery voltage	1.6	3.3	3.6	V
ICC _{max}	Maximum operating current @ VDD	--	--	200	mA
T _{env}	Operating temperature	-40	--	85	°C

3.3.2 Power Consumption

Table 8 Power consumption

Parameter	Measure Pin	Typ.	Unit
Average tracking current (GNSS)	VDD ^[1]	33	mA
Standby mode	AVDD_BAK ^[2]	14	uA

* [1] Condition: VDD = 3.3V @ Room Temperature. All Pins Open. GNSS = GPS/QZSS+Galileo+GLONASS+SBAS

* [2] Condition: AVDD_BAK = 3.3V @ Room Temperature. All Pins Open.

4 HARDWARE DESCRIPTION

4.1 Connecting Power

In order to ensure the positioning performance, please control the ripple of the module power supply. It is recommended to use the LDO with max output current above 100 mA.

If the power for VDD pin is off, the real-time clock (RTC) and battery backed RAM (BBR) are supplied through the AVDD_BAK pin. Thus, orbit information and time can be maintained and will allow a Hot or Warm start.

Note: If no backup supply is available, connect the AVDD_BAK pin to the main power supply. Floating state is not recommended.

4.2 Antenna Design

There is a built-in LNA and SAW in the GNSS module. It is recommended to use an active antenna with gain less than 30 dB.

The module has built-in short circuit protection and open circuit detection functions, which can detect the antenna status of normal connection, open circuit, and short circuit, and send out the status prompt message in NMEA data.

- **Short circuit protection**
 - » The module includes internal short circuit antenna detection. Once an overcurrent is detected at the ANT_BIAS port, the module will cut off this power supply automatically to prevent permanent damages.
- **Open circuit detection**
 - » The module can detect an open circuit in the antenna. Users can judge it from antenna status messages.

4.3 Reset and Mode Control

The operation mode of GNSS module is controlled by PRRSTX (nRESET) and PRTRG (BOOT) pin. While the module works in normal operation, leave PRRSTX and PRTRG pins floating if there is no upgrading or reset demands, or others.

- Keep PRTRG pin floating during system power-up or the external reset (PRRSTX from low to high), and the module will enter **User Normal Mode**.
- When the module powers up or PRRSTX from low to high, the module will execute an **external reset**. (If the power for AVDD_BAK is always on, the external reset will not affect the ephemeris data in the backup domain)
- Drive PRTRG pin to low or connect PRTRG to GND directly (not by pull-down resistance) during system power-up or the external reset (PRRSTX from low to high), and the system enters **BootROM Command Mode** at PRTRG pin being released from low to floating state, and ready for firmware upgrading command.

- When connecting PRRSTX and PRTRG to any host IO, DO NOT use the pull-up or pull-down resistance.

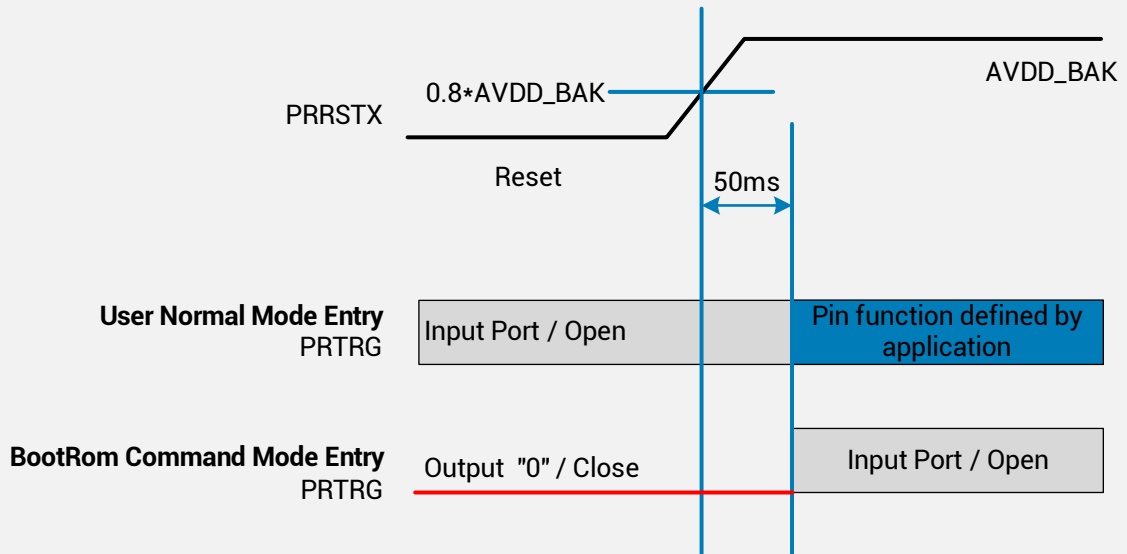


Figure 4 Timing of mode entry with host controller

5 DEFAULT MESSAGE

Table 9 Default messages

Interface	Settings
UART output	9600 baud, 8 data bits, no parity bit, 1 stop bit. Configured to transmit both NMEA and HD Binary protocols, but only the following NMEA (and no HD Binary sentence) messages have been activated at start-up: GGA, GSA, GSV, RMC, ZDA, TXT-ANT
UART input	9600 baud, 8 data bits, no parity bit, 1 stop bit, autobauding disabled. Automatically accepts following protocols without need of explicit configuration: HD binary sentence, NMEA The GNSS receiver supports interleaved HD Binary and NMEA messages.
Timepulse (1Hz Nav)	1 pulse per second, synchronized at rising edge, pulse length 100 ms.

* Refer to *GNSS_Protocol_Specification* for information about other settings.

When the module is applied to the specific application where the main supply needs to be cut, in this case, it is recommended to cut the serial interface connection at the same time or set the serial port to input mode or high impedance state.

6 MECHANICAL SPECIFICATION

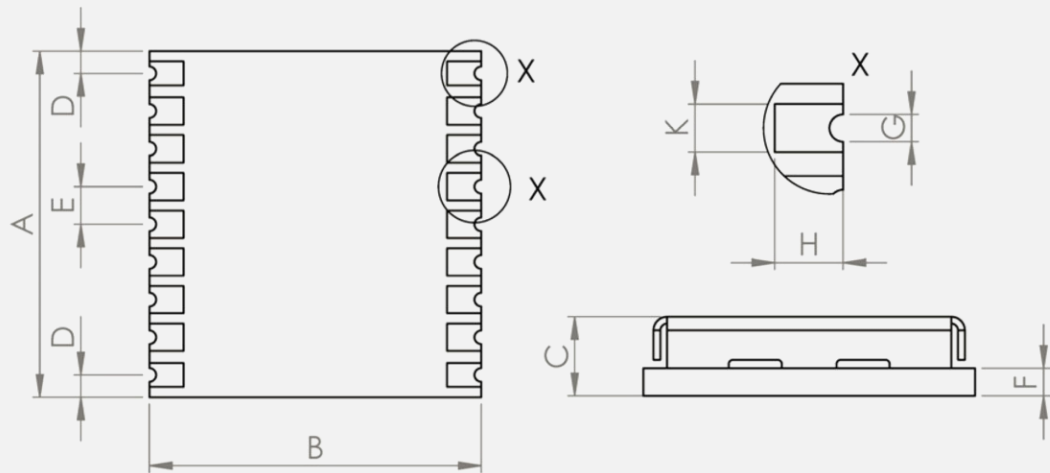


Figure 5 Dimensions

Table 10 Dimensions

Symbol	Min. (mm)	Typ. (mm)	Max. (mm)
A	9.9	10.1	10.3
B	9.5	9.7	9.9
C	2.3	2.5	2.7
D	0.55	0.65	0.95
E	1.0	1.1	1.2
F	0.6	0.8	--
G	0.4	0.5	0.6
H	0.8	0.9	1.0
K	0.7	0.8	0.9

7 REFERENCE DESIGN

7.1 Minimal Design

The minimal design of TAU1103 shows as below. The 82 nH inductor is used only when an active antenna is connected, and no need with a passive antenna. The characteristic impedance from RF_IN pin to the antenna connector should be 50Ω.

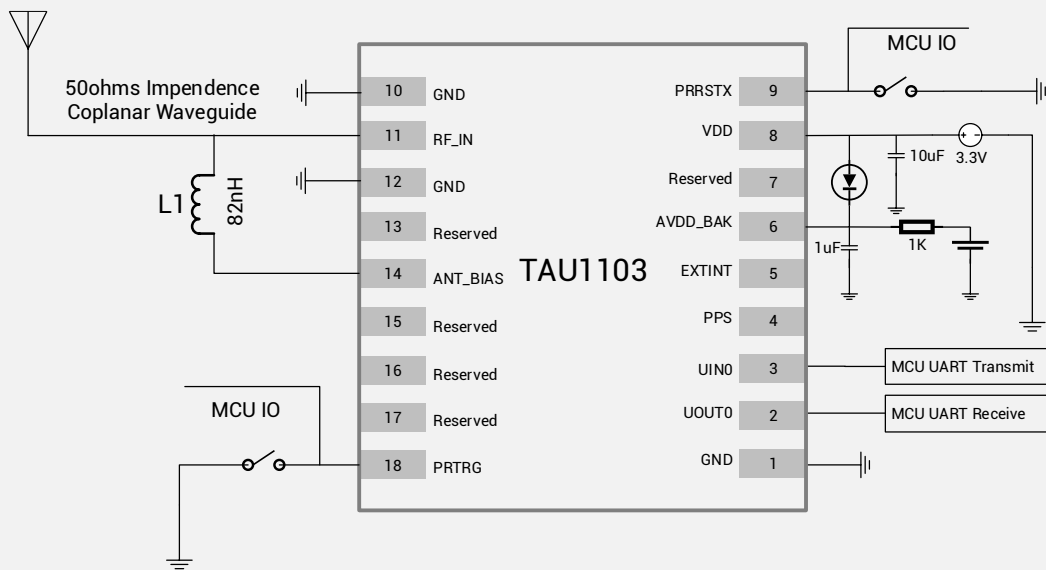


Figure 6 Minimal application diagram

7.2 PCB Footprint Reference

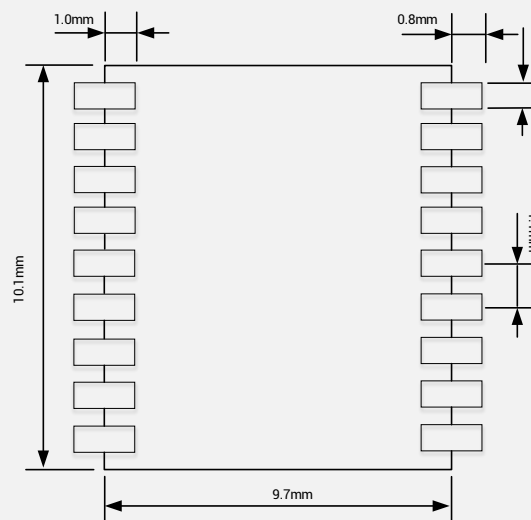


Figure 7 PCB Footprint Reference

7.3 Layout Notes

- (1) A decoupling capacitor should be placed close to VDD pin of the module, and the width of power routing should be more than 0.5 mm.
- (2) The width of RF routing between RF port to antenna interface should be wider than 0.2 mm. The characteristic impedance of RF routing between RF port to antenna interface should be controlled to 50Ω.
- (3) It is recommended that the routing from RF port to antenna interface refers to the second layer, and no routing are recommended on the layer.
- (4) Do not place the module close to any EMI source, like antenna, RF routing, DC/DC or power conductor, clock signal or other high-frequency switching signal, etc.

8 SOFTWARE INTERFACE

8.1 NMEA Message Format

Table 11 NMEA output message

NMEA	Sub ID	Description
GGA	0x00	Global positioning system fixed data
GLL	0x01	Geographic position - latitude/longitude
GRS	0x02	GNSS range residuals
GSA	0x03	GNSS Overall satellite data
GSV	0x04	GNSS Detailed satellite data
RMC	0x05	Recommended minimal data for GNSS
VTG	0x06	Course over ground and ground speed
ZDA	0x07	Date and time
GST	0x08	GNSS Pseudorange Error Statistics
TXT	0x20	Antenna status

* The default output of module is GGA, GSA, GSV, RMC, ZDA, and TXT.

8.1.1 GGA - Global Positioning System Fix Data

Output example of Table 12 shows as below:

```
$GNGGA,074144.000,3957.79941,N,11619.02981,E,1,19,0.83,105.5,M,-8.4,M,,*65
```

Table 12 GGA Data Format

Name	Example	Unit	Description
Message ID	\$GNGGA		GGA protocol header
UTC Time	074144.000		hhmmss.sss
Latitude	3957.79941		ddmm.mmmmm
N/S indicator	N		N=north or S=south
Longitude	11619.02981		dddmm.mmmmm
E/W Indicator	E		E=east or W=west
Position Fix Indicator	1		See Table 13
Satellites Used	19		Number of satellites in use, 00-24
HDOP	0.83		Horizontal Dilution of Precision (meters)
MSL Altitude	105.5	meters	Antenna Altitude above/below mean-sea-level (geoid) (in meters)
Units	M	meters	Units of antenna altitude, meters
Geoidal Separation	-8.4	meters	
Units	M	meters	Units of geoidal separation, meters
Age of diff. GNSS data		second	Null fields when DGPS is not used

Diff. Ref. Station ID			Differential reference station ID, 0000-1023
Checksum	*65		Checksum
<CR> <LF>			End of message termination

Table 13 Position Fix Indicators

Value	Description
0	Fix not available
1	GNSS fix
2	Differential GNSS fix

8.1.2 GLL - Geographic Position - Latitude/Longitude

Output example of Table 14 shows as below:

```
$GNGLL,2503.71465,N,12138.73922,E,062052.000,A,A*45
```

Table 14 GLL Data Format

Name	Example	Unit	Description
Message ID	\$GNGLL		GLL protocol header
Latitude	2503.71465		ddmm.mmmmm
N/S indicator	N		N=north or S=south
Longitude	12138.73922		dddmm.mmmmm
E/W indicator	E		E=east or W=west
UTC Time	062052.000		hhmmss.sss
Status	A		A=data valid or V=data not valid
Mode	A		A=Autonomous, D=DGPS, N=Data not valid,
Checksum	*45		
<CR> <LF>			End of message termination

8.1.3 GSA - GNSS DOP and Active Satellites

Output example of Table 15 shows as below:

```
$GPGSA,A,3,01,11,18,30,28,07,17,22,03,,1.10,0.79,0.77,1*12
```

```
$BDGSA,A,3,10,07,08,12,03,13,01,11,02,04,05,,1.10,0.79,0.77,4*0B
```

Table 15 GSA Data Format

Name	Example	Unit	Description
Message ID	\$GPGSA		GSA protocol header
Mode 1	A		See Table 16
Mode 2	3		See Table 17
ID of satellite used	01		Sv on Channel 1
ID of satellite used	11		Sv on Channel 2
....		

ID of satellite used			Sv on Channel 12
PDOP	1.10		Position Dilution of Precision
HDOP	0.79		Horizontal Dilution of Precision
VDOP	0.77		Vertical Dilution of Precision
System ID	1		Satellites used in GPS 1= GPS 4=BD
Checksum	*12		
<CR> <LF>			End of message termination

Table 16 Mode 1

Value	Description
M	Manual-forced to operate in 2D or 3D mode
A	Automatic-allowed to automatically switch 2D/3D

Table 17 Mode 2

Value	Description
1	Fix not available
2	2D
3	3D

8.1.4 GSV - GNSS Satellites in View

Output example of Table 18 shows as below:

\$GPGSV,4,1,15,193,69,35,39,6,50,28,41,137,50,134,34,129,50,134,34*73

\$GPGSV,4,2,15,17,45,137,41,2,42,326,40,5,42,250,40,128,38,243,36*4B

\$GPGSV,4,3,15,9,36,65,42,12,26,285,35,127,12,260,32,19,9,137,35*7D

\$GPGSV,4,4,15,23,8,41,35,25,4,316,36,28,,,*4F

\$BDGSV,3,1,09,8,75,64,39,6,73,237,38,3,58,205,38,1,53,143,38*56

\$BDGSV,3,2,09,9,47,224,38,4,38,118,37,2,35,246,33,5,16,259,31*6C

\$BDGSV,3,3,09,10,2,210,21*62

Table 18 GSV Data Format

Name	Example	Unit	Description
Message ID	\$GPGSV		GSV protocol header
Total number of messages ^[1]	4		Range 1 to 6, Total number of GSV messages to be transmitted in this group
Message number ^[1]	1		Range 1 to 6 Origin number of this GSV message within current group

Satellites in view	15		Total number of satellites in view
Satellite ID ^[2]	193		Satellite PRN number
Elevation	69	degrees	Elevation in degrees (Range 00 to 90)
Azimuth	35	degrees	Azimuth in degrees to true north (Range 000 to 359)
SNR (C/No)	39	dB-Hz	SNR in dB (Range 00 to 99, null when not tracking)
...		
Satellite ID	129		Satellite PRN number (Range 01 to 196)
Elevation	50	degrees	Elevation in degrees (Range 00 to 90)
Azimuth	134	degrees	Azimuth in degrees to true north (Range 000 to 359)
SNR (C/No)	34	dB-Hz	SNR in dB Channel 4 (Range 00 to 99, null when not tracking)
Checksum	*73		
<CR> <LF>			End of message termination

* [1]: Depending on the number of satellites tracked multiple messages of GSV data may be required.

* [2]: GPS ID: 01~32, SBAS ID: 127~141, QZSS ID: 193~199, BeiDou ID: 01~32

8.1.5 RMC - Recommended Minimum Specific GNSS Data

Output example of Table 19 shows as below:

```
$GNRMC,075939.000,A,2225.56166,N,11412.68199,E,0.000,64.79,020589,0.0,E,A*1D
```

```
$GNRMC,074458.000,A,3957.79932,N,11619.03010,E,0.005,0.00,280419,,A*4B
```

Table 19 RMC Data Format

Name	Example	Unit	Description
Message ID	\$GNRMC		RMC protocol header
UTC Time	075939.000		hhmmss.sss
Status	A		A=data valid or V=data not valid
Latitude	2225.56166		ddmm.mmmmm
N/S Indicator	N		N=north or S=south
Longitude	11412.68199		dddmm.mmmmm
E/W Indicator	E		E=east or W=west
Speed over ground	0.000	knots	Speed over ground
Course over ground	64.79	degrees	Degrees to true north
Date	020589		ddmmyy
Magnetic variation	0.0	degrees	(Not shown)
Variation sense	E		E=east or W=west (Not shown)
Mode	A		A=Autonomous, D=DGPS, N=Data not valid,
Checksum	*4B		
<CR> <LF>			End of message termination

8.1.6 VTG - Course over Ground and Ground Speed

Output example of Table 20 shows as below:

```
$GNVTG,0.00,T,0.00,M,0.000,N,0.000,K,A*3D
```

```
$GNVTG,0.00,T,,M,0.011,N,0.021,K,A*20
```

Table 20 VTG Data Format

Name	Example	Unit	Description
Message ID	\$GNVTG		VTG protocol header
Course over ground	0.00	degrees	Degrees to true north
Reference	T		True north
Course over ground		degrees	Degrees to Magnetic
Reference	M		Magnetic
Speed over ground	0.000	knots	Measured speed
Units	N		Knots
Speed over ground	0.000	km/hr	Measured speed
Units	K		Kilometer per hour
Mode	A		A=Autonomous, D=DGPS, N=Data not valid,
Checksum	*3D		
<CR> <LF>			End of message termination

8.1.7 ZDA - Time & Date

Output example of Table 21 shows as below:

```
$GNZDA,033900.000,28,10,2015,,*4C
```

Table 21 ZDA Data Format

Name	Example	Unit	Description
Message ID	\$GNZDA		ZDA protocol header
UTC Time	033900.000		hhmmss.sss
Day	28		dd (01 to 31)
Month	10		mm (01 to 12)
Year	2015		yyyy (1980 to 2025)
Local zone hours		hour	
Local zone minutes		minute	
Checksum	*4C		
<CR> <LF>			End of message termination

8.1.8 GST - GNSS Pseudorange Error Statistics

Output example of Table 22 shows as below:

\$GNGST,081119.000,1.2,,,,0.6,0.5,0.5*52

Table 22 GST Data Format

Name	Example	Unit	Description
Message ID	\$GNGST		GST protocol header
UTC Time	081119.000		hhmmss.sss
RMS value	1.2		RMS value of the standard deviation of the range inputs to the navigation process. Range inputs include pseudoranges & DGNSS corrections
Standard semi-major axis of error		Meter	Standard deviation of semi-major axis of error ellipse
Standard semi-minor axis of error		Meter	Standard deviation of semi-minor axis of error ellipse
Orientation of semi-major axis of error		Degree	Orientation of semi-major axis of error ellipse (degrees from true north)
latitude error	0.6	Meter	Standard deviation of latitude error
longitude error	0.5	Meter	Standard deviation of longitude error
altitude error	0.5	Meter	Standard deviation of altitude error
Checksum	*52		

8.1.9 TXT-ANT & USR message

Output example of Table 23 shows as below:

\$GNTXT,01,01,01,ANT_OK*50

Table 23 TXT Data Format

Name	Example	Unit	Description
Message ID	\$GNTXT		USR message protocol header
Total number	01		Total number of sentences
Sentence Number	01		Sentence number
Identifier	01		Text identifier
Content	ANT_OK		Text message
Checksum	*50	4C	
<CR> <LF>			End of message termination

Table 24 Antenna status NMEA output

Active antenna status	GNSS module output
Short circuit	\$GNTXT,01,01,01,ANT_SHORT*06
Normal operating	\$GNTXT,01,01,01,ANT_OK*50
Open circuit	\$GNTXT,01,01,01,ANT_OPEN*40

8.2 Exclusive Binary Message

The common exclusive commands show as below:

Table 25 Commands exclusive to TAU1103

Command description	Software[command] ^[2]
Perform a Cold start	F1 D9 06 40 01 00 01 48 22
Perform a Warm start	F1 D9 06 40 01 00 02 49 23
Perform a Hot start	F1 D9 06 40 01 00 03 4A 24
Perform a Factory reset	F1 D9 06 09 08 00 02 00 00 00 FF FF FF FF 15 01
UART configures as 115200bps	F1 D9 06 00 08 00 00 00 00 00 C2 01 00 D1 E0
UART configures as 9600bps	F1 D9 06 00 08 00 00 00 00 80 25 00 00 B3 07
Enable ZDA message	F1 D9 06 01 03 00 F0 07 01 02 1E
Disable ZDA message	F1 D9 06 01 03 00 F0 07 00 01 1D
Navigate with GPS only	F1 D9 06 0C 04 00 01 00 00 00 17 A0
Navigate with BeiDou system only	F1 D9 06 0C 04 00 04 00 00 00 1A AC
Navigate with GPS+ BeiDou system	F1 D9 06 0C 04 00 05 00 00 00 1B B0
Query firmware version ^[1]	F1 D9 0A 04 00 00 0E 34

* [1] Firmware version will show as Hex mode too.

* [2] Add 0D 0A at the end of command.

8.3 Mode Configuration

8.3.1 CFG-SIMPLERST

Configure soft reset (as system command, there is NO ACK);

F1 D9 06 40 01 00 00 47 21

Configure a cold start (as system command, there is NO ACK);

F1 D9 06 40 01 00 01 48 22

Configure a warm start (as system command, there is NO ACK);

F1 D9 06 40 01 00 02 49 23

Configure a hot start (as system command, there is NO ACK);

F1 D9 06 40 01 00 03 4A 24

Configure GNSS stop (if successful, it would return ACK, else return NAK);

F1 D9 06 40 01 00 10 57 31

Configure GNSS start (if successful, it would return ACK, else return NAK);

F1 D9 06 40 01 00 11 58 32

Configure Clear All TRK Channels (if successful, it would return ACK, else return NAK);

F1 D9 06 40 01 00 80 C7 A1

CFG-SLEEP

Set GNSS task to deep sleep for 5000 ms;

F1 D9 06 41 05 00 88 13 00 00 01 E8 56

CFG-PWRCTL

Poll message of power control;

F1 D9 06 42 00 00 13 3F

Set receiver into cyclic sleep mode;

F1 D9 06 42 14 00 00 05 00 00 B8 0B 00 00 60 EA 00 00 D0 07 00 00 00 00 00 00 45 F9





9 PRODUCT PACKAGING AND HANDLING

9.1 Packaging

9.1.1 Packaging Notes

TAU1103 GNSS module is a Moisture Sensitive Device (MSD) and Electrostatic Sensitive Device (ESD). During packing and shipping, it is strictly required to take appropriate MSD handling instructions and precautions. The table below shows the general packing hierarchy for the standard shipment.

Table 26 Packing hierarchy

Module	Reel	Sealed bag	Shipping carton
			

9.1.2 Tape and Reel

TAU1103 modules are delivered as hermetically sealed, reeled tapes in order to enable efficient production, production lot set-up and tear-down. The figure below shows the tape dimensions.

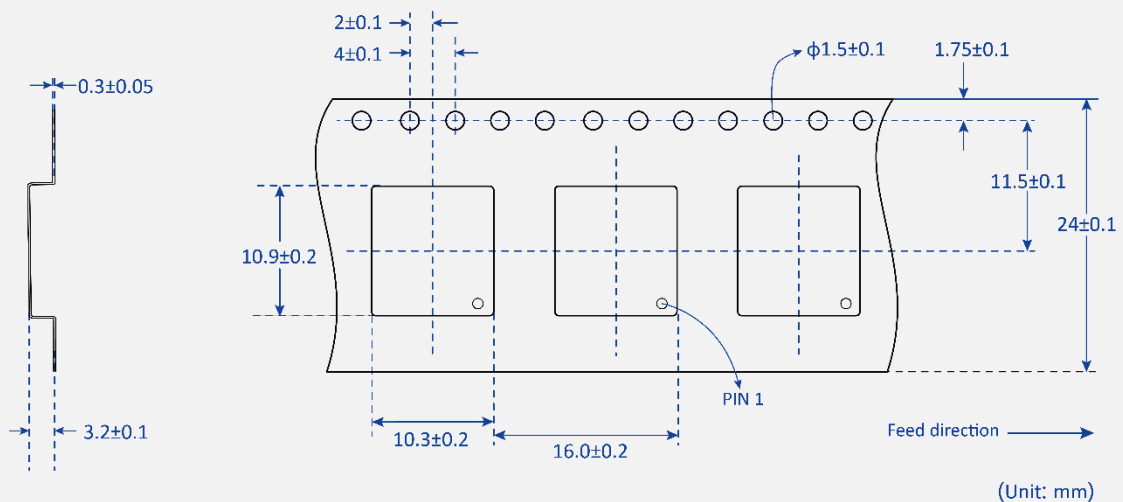


Figure 8 Tape dimensions

The TAU1103 modules are deliverable in quantities of 1000 pcs on a reel. The figure below shows the dimensions of reel for TAU1103.

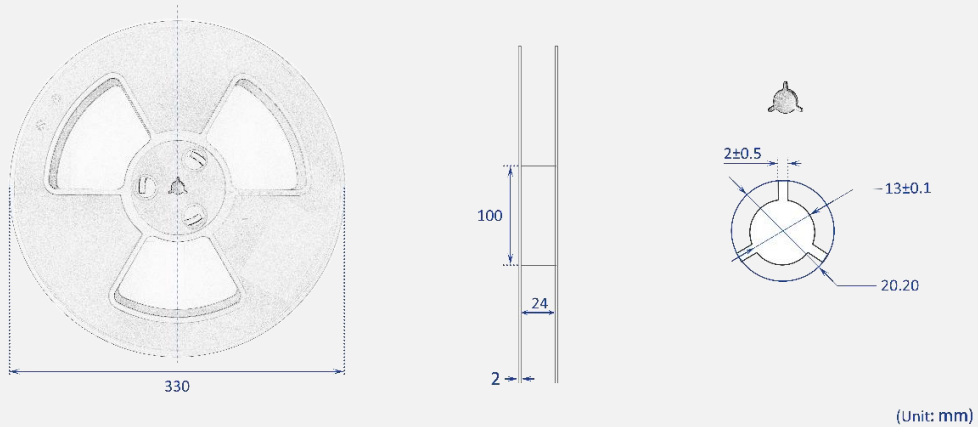


Figure 9 Reel dimensions

9.1.3 Shipment Packaging

The reels of TAU1103 are packed in the sealed bags and shipped by shipping cartons. Up to five sealed bags (5000 pcs in total) can be packed in one shipping carton.

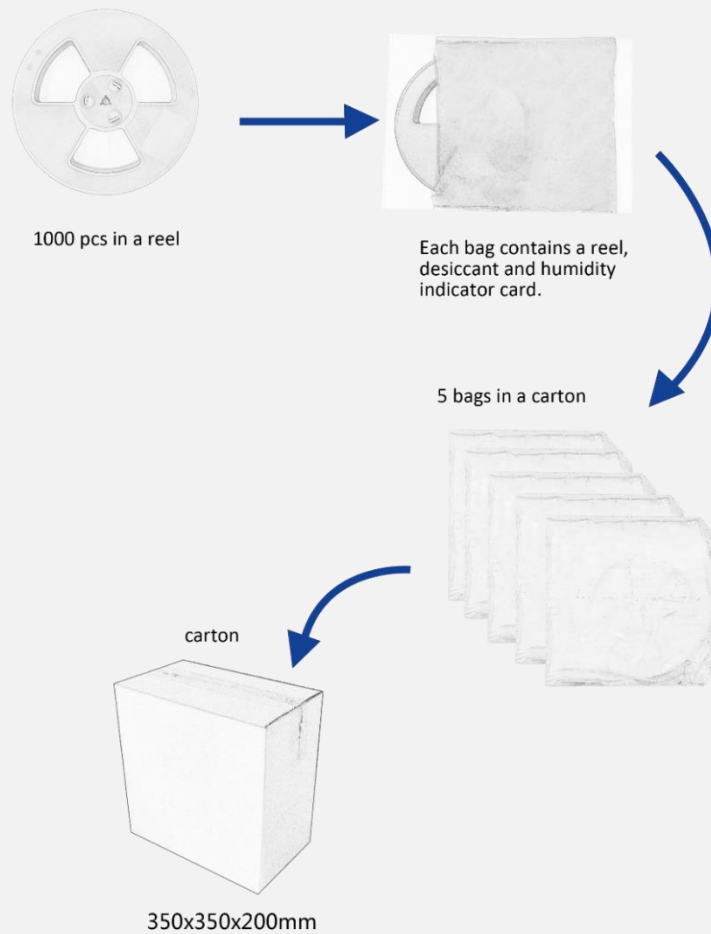


Figure 10 Packaging

9.2 Storage

In order to prevent moisture intake and protect against electrostatic discharge, TAU1103 is packaged together with a humidity indicator card and desiccant to absorb humidity.

9.3 Handling

9.3.1 ESD Handling Precautions

TAU1103 module which contains highly sensitive electronic circuitry is Electrostatic Sensitive Device (ESD). Observe precautions for handling! Failure to observe these precautions may result in severe damage to the GNSS module!

- Unless there is a galvanic coupling between the local GND (i.e. the workbench) and the PCB GND, then the first point of contact when handling the PCB must always be between the local GND and PCB GND.
- Before mounting an antenna patch, connect ground of the device.
- When handling the RF pin, do not come into contact with any charged capacitors and be careful when contacting materials that can develop charges (e.g. patch antenna ~10 pF, coax cable ~50 – 80 pF/m, soldering iron ...)
- To prevent electrostatic discharge through the RF input, do not touch any exposed antenna area. If there is any risk that such exposed antenna area is touched in non ESD protected work area, implement proper ESD protection measures in the design.
- When soldering RF connectors and patch antennas to the receiver's RF pin, make sure to use an ESD safe soldering iron (tip).



9.3.2 ESD Protection Measures

This series of GNSS positioning modules is sensitive to static electricity. Whenever handling the module, particular care must be exercised to reduce the risk of electrostatic charges. In addition to standard ESD safety practices, the following measures should be taken into account.

- Adds ESD Diodes to the RF input part to prevent electrostatics discharge.
- Do not touch any exposed antenna area.
- Adds ESD Diodes to the UART interface.


9.3.3 Moisture Sensitivity Level

The Moisture Sensitivity Level (MSL) of the GNSS modules is MSL3.

10 LABELING AND ORDERING INFORMATION

Labeling and ordering information help customers get more about Allystar products.

10.1 Labeling

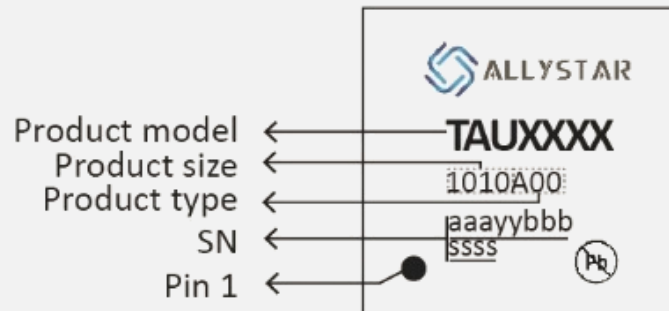

Symbol	Explanation	Instance
TAUXXXX	Product model	TAU1103
1010A00	1010 represents the product size.	1010A00
	A00 means the product type.	
aaayybbbssss	Serial number	351190010001

10.2 Ordering info

Table 27 Ordering codes

Ordering No.	Product information
TAU1103-1010A00E ^[1]	Concurrent GNSS LCC Module, TCXO, Flash, 10.1*9.7 mm, 1000 pieces/reel.

* [1] See Table 1 for the GNSS systems supported.

11 RELATED DOCUMENTS

- [1] Recommended Reflow Profile
- [2] Satrack User Manual
- [3] Allystar Common Commands
- [4] GNSS Protocol Specification

12 REVISION HISTORY

Revision	Date	Reviser	Status/Comments
V1.0	2018-09-25	Daisy	Start version, first released
V1.1	2018-12-27	Daisy	Dimension updates
V1.2	2019-12-17	Vita Wu	<p>Adds packaging info in Section 8;</p> <p>Adds <i>Section 7 Software Interface</i>;</p> <p>Adds PCB reference and layout notes in Section 6;</p> <p>Updates mechanical specification in Section 5;</p> <p>Updates AVDD_BAK to VDD in Table 5.</p>
V1.3	2021-02	Vita Wu	<p>Fixes mechanical specification.</p> <p>Improves PIN description.</p> <p>Deletes SBAS support.</p> <p>Updates the inductor value used in minimal design to be 82nH.</p> <p>Improves Section 4.3.</p> <p>Adds capacitor in minimal design.</p> <p>Adds routing notes in layout (Section 6.3)</p> <p>Places Table 9 in the end of Section 7.1.9.</p> <p>Customizes to support one of three systems (BDS, Galileo, and GLONASS).</p> <p>Localization.</p> <p>Updates IO characteristics.</p>
V1.4	2021-07	Vita Wu	<p>Adds labeling and ordering info.</p> <p>Details default settings.</p> <p>Adds related document list.</p> <p>Adds document info section.</p> <p>Updates to support GPS/GLO/GAL/QZSS, and removes BDS support.</p> <p>Adds Pin 1 note.</p>
V1.5	2022-10	Cao Min	<p>Updates the product grade classification</p> <p>Updates the chip name described in section 1.1 and 1.4</p> <p>Adds CE-RED and FCC certification</p> <p>Optimizes the product ordering code</p> <p>Modifies the MSL to MSL3</p> <p>Lists Section 5 as a separate chapter</p> <p>Contents improvement</p> <p>Updates headquarters address</p>



www.allystar.com



info.gnss@allystar.com



Headquarters

Allystar Technology (Shenzhen) Co., Ltd.

Address: 201-2, 2F, Tower F, Xinghe World, No.1, Yabao Road, LongGang District, Shenzhen City, Guangdong Province, China.

Calgary Office

Allystar Technology (Canada) Ltd.

Address: Unit 288, 3553 31 Street NW Calgary, Alberta, Canada T2L 2K7

